

OPERATING INSTRUCTIONS

Mount breaker to the machine by using skid steer plate or mounting directly to mini excavator.
Secure breaker to machine and check to see that all locking devices are in place.
Turn the machine off and depress hydraulic pedal on machine to relieve pressure from lines.
Couple the male fitting to female fitting on machine, and female fitting to male fitting.
Lubricate the stinger generously before operating.
Lubricate stinger every other hour of use.
Lubricate stinger by pressing it into breaker, and give two to three pumps of grease provided by Superior Rents.
To operate, press the stinger onto the surface that you want to break.
Push the hydraulic pedal causing oil to flow to the breaker, and it will begin firing.
Make sure the stinger is pushed all the way into breaker before firing.
Apply down pressure from machine as you push hydraulic pedal down to fire breaker.
Shut machine off before unhooking hoses.
Push your hydraulic pedal down to bleed pressure off the system.
Wipe off the couplings, and proceed to unhook them.

NOTE: You should never try to pry with the stinger.

TROUBLESHOOTING

Problem:

Hydraulic fluid is leaking.

Cause:

The hose is cut or torn.

Problem:

Breaker will not fire.

Cause:

It does not have proper hydraulic flow.