

OPERATING INSTRUCTIONS

Plug machine into proper outlet.

Lower handle to the desired operating position, and lock in place.

Place both hands on the handle grips.

Place your fingers around the on/off lever which extends from one side to the other.

The safety lock-out lever is located underneath the right side handle grip.

To unlock the lock-out lever use your right hand to press the lever down.

While still pressing the lever pull the on/off lever to start the machine, and then release the lock-out lever.

The lock-out lever will automatically engage when you release the on/off switch lever.

To maneuver the machine raise handle slightly, and the machine will go to the right.

The higher you raise it the faster it will go.

If you lower the handle, the machine will go to the left.

The more you lower it the faster it will go.

You should always practice on a smooth and open area to gain experience in operating the machine.

INSTALLING ATTACHMENT

Lock the handle in the upright position, and tip the machine back so it rests on the handle and wheels.

Fit the three slots of the clutch plate in the back of the brush or attachment over the three lugs.

Push firmly into position and turn it counterclockwise until it locks in place.

Center desired pad on brush and begin to use.

If using sandpaper, center desired pad, then center desired grit of sandpaper and begin to use.

REMOVING ATTACHMENT

Tip machine back so it rests on the handles and wheels.

Turn the brush or attachment clockwise until it disengages and lifts off.

TROUBLESHOOTING

Problem:

Machine won't turn on.

Cause:

Check to make sure power cord is plugged in correctly.

Problem:

Machine is hard to control.

Cause:

Make sure pad and sandpaper center on machine.