

SKID LOADER AUGER ATTACHMENT

OPERATING INSTRUCTIONS

NOTE: Read the skid loaders operator's manual for connecting and removing instruction.

Position hydraulic hoses so they will not be pinched when connecting the auger.
The skid steer coupler handles should be in the unlocked position, and the lock pins retracted.
Move to the skid steer operator seat and start engine.
Lower skid steer lift arms to their lowest position.
Carefully move and align the skid steer to the auger.
The top of the skid steer coupler must index into the auger flange.
Roll the skid steer coupler into the auger so the coupler handles can be engaged.
Shut off the engine, set brake, and remove key.
Move the skid steer coupler handles to the locked position.
The lock pins must be completely extended and secured into the slots provided on the auger.
Connect hydraulic hoses to skid steer auxiliary quick couplers.

OPERATING AUGER BIT

Unlock the auxiliary hydraulics.
Push the foot pedal forward to rotate bit in a drilling motion.
Push the foot pedal backwards to reverse flow.
Lock the auxiliary hydraulics when done drilling.

TROUBLESHOOTING

Problem:
Can't get auxiliary pedal to go forward or reverse.

Cause:
Auxiliary hydraulics is locked

Problem:
Loss of power to the auger.

Cause:
Hydraulic fitting is leaking.
Low level of hydraulic fluid in the power unit.

Problem:
Can't get the machine to start.

Cause:
Auxiliary hydraulics are in the unlocked position.